 
Smart Projector User Manual













Please read this manual carefully before use and keep it for future use





Contents

Safety Cautions	1
Parts and Panel Instruction	
Device Connectivity	5
Quick Guide	6
Projector Locating	
Turn ON/OFF	
Remote Operation and Pairing Instruction	
Focus Adjust	8
Basic Specification	
Projection Distance	
Cleaning Method	
WarrantyCard	1

Safety Cautions

Thanks for your purchasing of our projectors. Please read through this user manual and keep it properly after reading for future reference.

- Do not put the projector in the place where the warm air flows from the air conditions directly. Condensation of water or high temperature may lead to product damage.
- Please ensure no gather things around the projector and the vent is not blocked to avoid overheating.
- 3. Please prevent foreign objects such as nails or paper scraps from falling into the projector. Don't insert any metal objects such as iron wires or screwdrivers into the projector. If any foreign object falls into, please turn off the power immediately and ask professional technician to take it out.
- 4. Put the projector far away from the liquid to avoid damage by liquid leakage.
- 5. Please use soft packing material to protect the projector if any long-distance transport needed. In the meanwhile, prevent from violent crashes and shaking. Use cotton sheet with 75% medical alcohol to wipe the lens if any stains or finger prints on it.
- 6. Do not look into the lens directly after the projector is turned on, the strong lights might hurt your eyes.
- Do not touch the front vent after a long time running, the vent may be heated and might burn your skin.



Please do not open the projector and conduct repair by yourself. If there is anything wrong, please contact with authorized customer service center for help.

 


Please do not locate the projector into the rain or heavy moist to avoid fire or electric leakage.




HDMI, HDMI High-Definition Multimedia Interface et le logo HDMI sont des marques de commerce ou des marques deposees de HDMI Licensing LLC.

Safety Cautions



Don't pile objects around projector

 

Don't locate projector in hot or heavy moist



Don't block the air vents (in & out)



Don't put it in dusty or smoky environment

 
Note: Please clean the dust screen regularly

1 Flip to the bottom of the projector and tear off the etched screen sticker;




Tear off the dust screen baffle;






3 Remove the dust filter and clean it.

 


Parts and Panel Instruction

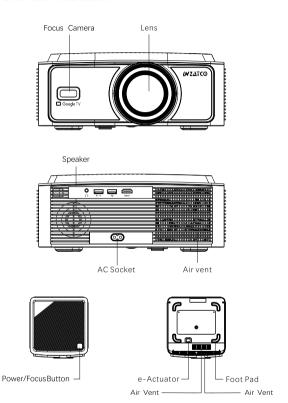


- Dust and dirt will block the air intake holes after a period of time using, a regular cleaning is required.
 According to the using environment differences, we recommand that the air intakes should be cleaned every 300 hours using.
- Cleaning method: swipe the air intakes gently with a soft brush unit holes's dust and dirt removed.

PartsandPanelInstruction

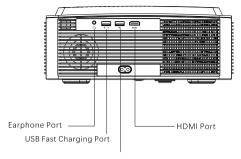


USB Flash Drive

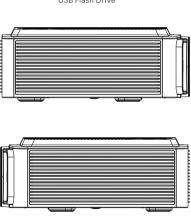

• The Ports may be different depends on actual models.

Device Connectivity

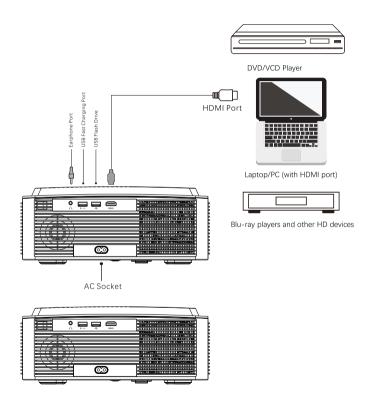


• The Ports may be different depends on actual models.

Quick Guide

1. Projector Locating

Please put the projector on a top flat surface horizontally. Press power button to turn on the projector.

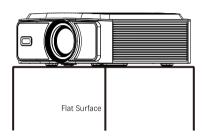

2. Turn ON/OFF

Turn ON


Touch (a) button on the top of projector or press (b) button on the remote control to turn on the projector.

Turn OFF


Touch **(**w) button twice on the top of projector or press **(**w) button twice on the remote control to shut down the system according to message presented.

3. Remote Operation and Pairing

Remote Operation

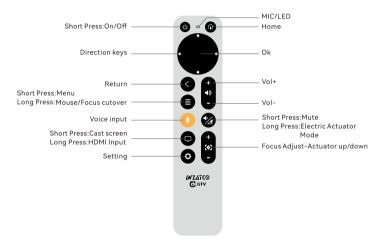

4. Focus Adjust

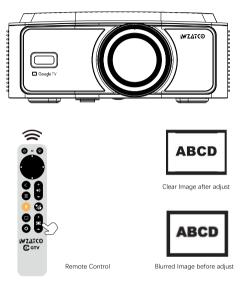


Press Focus+/Focus- buttons on the remote control to adjust the focus to make the image clear. Or turn on the Auto Focus in setting to enable auto focus feature, then it will adjust the focus automatically every time when any place or angle changed.

Basic Specifications/Parts

Product name	Smart Projector	Display Technology	LCD
Light Source	COB solid light	Working Temperature	0-35 degrees
Operate Methods	Button/Remote Control	Input Port	HDMI/USB
Output Port	3.5mm Earphome Port	Dimension	275mm*285mm*110mm
Net Weight	2.68kg		
Parts and accessories	User manual/remote control/power cord		

Projection Distance

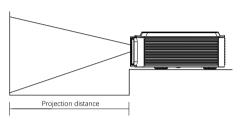

Screen Size	Screen Size W*H	Distance
(inch)	(m)	(m)
42	0. 93*0. 53	1.19
56	1. 33*0. 75	1.70
66	1. 55*0. 87	1.98
86	1.86*1.05	2.38
100	2. 21*1. 25	2.83
120	2. 66*1. 49	3.40
150	3. 32*1. 87	4.25

^{*} The projection size and distance data here above in the table is calculated based on throw ratio. The actual data may be different, so please just take it as a reference.

Cleaning Method

How to Clean

Please disconnect the power adapter before clean.

Please don't use insecticide or other volatile chemicals on projector or its lens.

Please don't let rubber or ethylene products contact the products for a long time. The coating will be damaged or peeled off.

Clean Projector

Please wipe with soft and dry cotton cloth. If it is very dirty, please wipe with a soft cloth dampened with diluted neutral detergent and use dry cloth to make it dry. If you use chemical fiber cloth, please be careful.

To avoid damage or coating peeled off, please don't use thinner, benzene or other solvents. Do not scratch the projector with nails or other hard objects to avoid scratching.

Clean Lens

Please use the professional cleaning kit such as air blower, lens cleaning tissue etc. to clean the lens. Or it may cause scratches.

Clean Ventilation Holes

Too many dusts will cause the projector overheating. Please clean ventilation holes at least every 1,000 hours use.

Turn off the projector>Disconnect the power adapter>Insert brush into a mini vacuum cleaner>Use it to clean outside of projector

Avoid direct use of vacuum cleaners without connectors, or use nozzles for cleaning.

Warm Hint: Due to the projector system might be updated Irregularly, so the operation maybe different, please refer to actual operations.

WARRANTY CARD

Please fill the requested information for official service and warranty.

Customer Name:					
Product Model:	Series Number:				
Address:	Date of Purchase:				
Dealer Name:	Phone No.:				
Failure Description :					

■This warranty is void if the failure of the product and accessories or any part, sealant or component thereof is due to (i) misuse, (ii) tampering, (iii) pedigleace,(iv) misapplication, (v) abuse, (vi) accident, and/or, (vii) a failure to properly (a) maintain, (b) clean, (c) reassemble, (d) submerge.



1 YEAR WARRANTY



Scan the QR code to register your e-warranty now! Registration is mandatory

DEMO VIDEO



Scan the QR code to watch the demo video and explore the features of your projector

RAISE A TICKET



Scan the QR code to submit a ticket and get prompt assistance from our support team.

NEED ASSISTANCE?





Need more information?

Please head online to www.wzatco.com for latest product details, user manual, maintenance tips, newsletters, special offers and so on

Additional assistance or service please contact us: Email:support@wzatco.com