




YUVA PLUS ANDROID

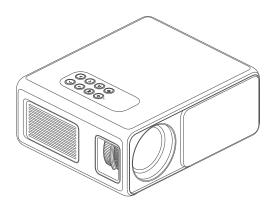

Note: As the product system is updated from time to time, the specific operation content is based on the actual situation.

Contents

Important Safeguards	1	
ccessories List		
rojector Overview2		
Specifications	4	
Multimedia Supported Formats	4	
Remote Control	5	
New Remote Control	6	
Switching Machine Operation	7	
Focus / Keystone Correction	8	
Standard Setting	9	
Use of the Projector	10	
How to Select the Signal S	ource10	
How to Read Files on U Dis	sk10	
How to Download App	11	
How to Connect to WiFi	11	
How to Use MaxhubShare	12	
How to Connect Bluetooth	Audio Device14	
Projection Settings	15	
Projection Method	17	
Custom Zoom	17	

Important Safeguards

- 1. Please read the manual carefully before operating projector. To ensure stable power supply, please use standard power cord.
- Please use the power supply and cable indicated on the rating label. The projector should be kept away from cloths, sofas and anything that may block the ventilation scoop. Please keep the unit away from flammable and explosive materials.
- 3. Please do not disassemble the unit by yourself as this will invalidate the warranty service. To protect your eyes, do not stare directly at the lens when the projector is on. The projector must be kept away from water and any other liquids.
- 4. To prevent electric shock, please keep the projector out of the rain and away from moisture. It is recommended to switch off the projector after it has run for 6 hours non-stop. Please use the original foam and other cushioning materials when transporting the projector.
- 5. If the projector does not work, please contact the authorized service agent.

Accessories List

 
Remote Control ×1

 
Power Cable ×1

 
User Manual x1

 
Lens Cap ×1

Projector Overview











- 1. Lens
- 2. Speaker
- 3. IR for Remote Control
- 4. Power Socket
- 5. Dust-Proof Net
- 6. Keystone Correction
- 7. Focusing

- 8. Air Outlet
- 9. Headphone Jack
- 10. AV Port
- 11. USB1 Port (Wired Mirroring Interface)
- 12. USB2 Port
- 13. HDMI1 Port
- 14. HDMI2 Port

Projector Overview

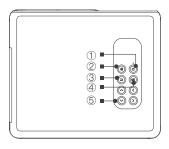

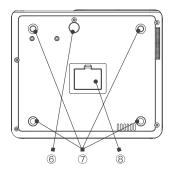

- 1. Power Key
- 2. Source key
- 3. Return Key
- 4. OK Key
- 5. Arrow Keys

- 6. Height Adjustment Machine Feet
- 7. Hanger Fixing Screw Holes (4 Points: Remove the machine foot pads before hoisting)
- 8. Bottom Label

(Tear off the bottom sticker, you can remove the bottom dust cover to clean up the dust)


Specifications

uages
ntrol

Multimedia Supported Formats


Image Format	BMP/JPG/PNG
Audio Format	MP3/WMA/M4A/MP2/AAC/OGG/WAV/FLAC
Video Format	MP4/VOB/3GP/TP/TS/MPE/F4V/DAT/WMV/MOV/FIV/TRP
File Format	ТХТ

Remote Control

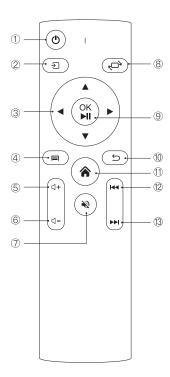

- 1. Power Key
- 2. Source Key
- 3. Arrow Keys
- 4. Menu Key
- 5. Volume +
- 6. Volume -
- 7. Mute
- 8. Screen Flip
- 9. Confirm Key/(Pause/Play Key)
- 10. Return Key
- 11. Home Key
- 12. Previous
- 13. Next

New Remote Control

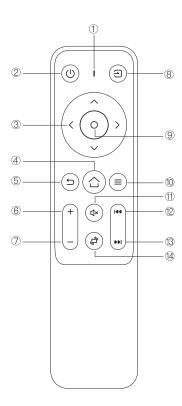

- 1. Signal Indicator
- 2. Power Key
- 3. Arrow keys
- 4. Home Key
- 5. Return key
- 6. Volume+
- 7. Volume-
- 8. Source key
- 9. Confirmation key
- 10. Menu
- 11. Mute Key
- 12. Previous
- 13. Next
- 14. Screen Flip

Switching Machine Operation

Power On:

Step1: Press the power button on the body or the power button on the remote control, the indicator light will turn blue and steady.

Step2: After 2 seconds, the projector starts to start, the image appears on the screen, and the unit enters the normal working state.


Step3: If the projector is newly installed, the image may be blurred or trapezoidal distortion when it is turned on for the first time. Please refer to the "Focus/Keystone Correction" section for calibration.

Step4: After the image is adjusted clearly, it can be viewed normally.

Power Off:

Step1: In the working state, press the power button of the body or the power button on the remote control to switch the projector to the standby state.

Step2: After the projector enters into the standby state, the machine is in the process of automatic heat dissipation, and the indicator light will change from blue to red.

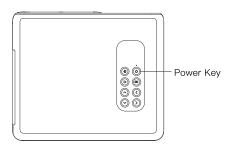



Please connect the power cord to the projector before connecting the power cord to an electrical outlet.

Focus / Keystone Correction

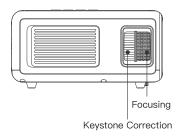


Image Focusing

Place the projector lens perpendicularly to the projection screen or curtain wall, and adjust the focus dial until the image is clear, that means the image focusing is finished.

During the focusing process, you can play the programs or pick up the product menu images to match the focusing adjustment.

Keystone Correction

Please turn the trapezoidal adjustment dial until the image is displayed normally.

Note: The projector has only mechanical trapezoidal correction in the vertical direction and there is no horizontal correction. Make sure the projector is level with the projected image.








Standard Setting

Refer to the data in the table below to place the projector away from the projection screen according to the preset graphic size. When installing, place the projector on a solid, stable countertop. The airframe should be well ventilated. Do not cover or block the vents. There should be no obstructions within 30cm of the vents.

Aspect Ratio	16:9
Picture Size (inch)	Projection Distance (m)
50	1.54
70	2.15
100	3.08
120	3.69

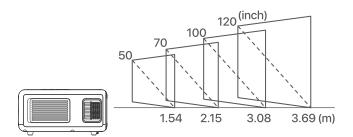

Note: The above data is for reference only, please refer to the physical measurement.

How to Select the Signal Source

Step 1: Turn on the projector and this main interface will appear.

Step 2: In the signal source option, select the signal source you need and confirm the connection.



How to Read Files on U Disk

Step 1: Insert your USB flash drive, select "Media" on the home screen.

Step 2: After entering the interface, then select your U disk, find the file you want to view in the classification to play .



How to Download App

Step 1: Select Google Play at the bottom of the main interface.

Step 2: After entering the interface, download the APP you need. Apps can be added via the "+" next to the Google Play.




How to Connect to WiFi

Step 1: Select"Network" → "Wireless" on the left side of the main interface.

Step 2: Search for WiFi, select the WiFi that needs to be connected, enter the password on the front through the virtual button, and confirm.



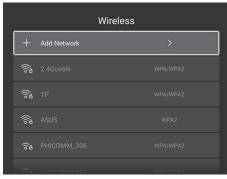

How to Use MaxhubShare

Step 1: Select "MaxhubShare" in the main interface.

Step 2: After entering the interface, use your mobile phone to scan the QR code on the right side of the interface to download the "MaxhubShare" APP.





Miracast:

Step 1: On your Android phone/tablet, open the settings menu.

Step 2: Access your display settings or screen mirroring.

Step 3: Select your Miracast receiver: TV-**** (TV name on the projector interface)

Miracast Steps:







iOS Cast:

Step 1: On your iOS device, open Control Center and tap screen Mirroring.

Step 2: Looking for devices that can be mirrored on.

Step 3: Select "TV- ****" (TV name on the projector interface) from the list to connect. iOS Cast Steps:








 $\times \text{TV}$ name is randomly generated, this picture is for reference only.

How to Connect Bluetooth Audio Device

Step 1: Select "Settings" on the left side of the main interface, after entering the interface, find "Bluetooth".

Step 2: Turn on Bluetooth, search for the device, and connect the device you need.

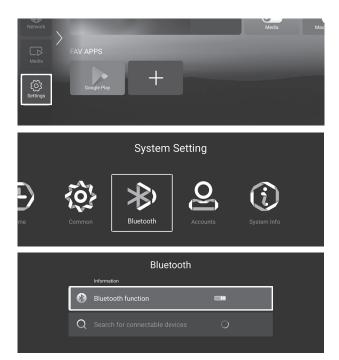

Projection Settings


Step 1: Select the setting icon on the left side of the main interface, press the "OK" button on the remote control to enter the setting interface, and select "Projection Settings".

Step 2: After entering the interface, select the mode you want in the projection settings.

Four-Sided Trapezoid


- Step 1: Advanced keystone correction: Select "Sides" mode.
- Step 2: Enter"Four-sided trapezoid", adjust according to the screen prompts.



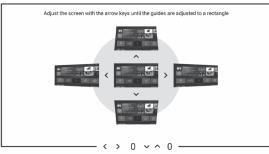

Square Trapezoid

- Step 1: Advanced keystone correction: Select "Corners" mode.
- Step 2: Enter "Square trapezoid", adjust according to the screen prompts.

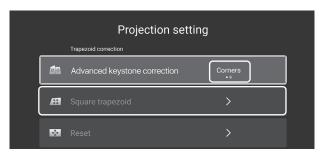





Projection Method

Front/Ceiling Front/Rear/CeilingRear (four modes)

 Can be selected according to the actual situation.



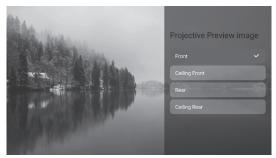

Custom Zoom

After opening, select the corresponding zoom mode to adjust the screen size.

