


5 Projector connection

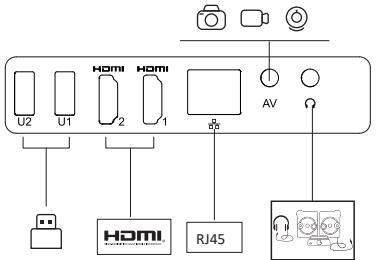

1. Selection of signal source

Press the signal source key "S" on the remote control to enter the signal source menu interface. Use the arrow keys and the confirm key to select the desired signal source.

2. Computer connection

Connect the computer through the projector: HDMI (high-definition interface)

Steps: switch the projector signal source > connect the corresponding data cable > switch the notebook output mode

Method: 1: XP system Fn + dual screen key (F1~F12 draws two screens), switch 2-3 times

Method 2: The computer operating system is Windows7 and above for users of Windows7.

Just press +P on your keyboard, select the "Copy" option to connect. If the above operation does not work, please update your computer's graphics card driver.

Attachment: The output buttons of different brands of notebooks are as follows:

Lenovo	Fn+F3	Fujitsu	Fn+F10
Dell	Fn+F8	Haier	Fn+F3
HP	Fn+F4	NEC	Fn+F3
ThinkPad	Fn+F7	Panasonic	Fn+F3
Asus	Fn+F8	Sharp	Fn+F5
Acer	Fn+F5	Hitachi	Fn+F7
Samsung	Fn+F4	TOSHIBA	Fn+F5
Sony	Fn+F7		

3. AV video equipment connection

Connect the 3in1 video adapter cable to the AV interface of the projector, and select the multimedia signal channel: "AV".

4. 3.5mm audio device connection

It can be connected to 3.5mm headphones and other wired audio equipment.

6 Wireless projection

IOS device

AirPlay: This feature allows the projector to display the same screen as the iPhone/iPad.

Note: Make sure the projector is connected to the phone under the Consent WiFi network (or the same hotspot)

Here's how to do it :

Step 1: In the projection side of my app, open the "transScreen" APP.

Step 2: Bring up the phone console interface and click the screen mirroring button

Step 3: Select the device you want to cast, select to be on the same screen.

The name of the projection device can be defined in the projection APP, which is subject to the machine; it is recommended to connect to 5G WiFi to avoid stuttering on the same screen.

Android device

Miracast: This feature allows the projector to be displayed on the same screen as an Android phone/tablet.

The steps to operate the projector and mobile phone are as follows:

Step 1: Go to Settings > Network > turn on the WiFi switch on the projection side, and open the "Miracast" APP in My App

Step 2: On the mobile phone (take Xiaomi as an example), open the WiFi port, enter the settings > other connection methods > wireless display > select the projection device name

Step 3: During the connection process, a connection invitation appears on the projector, click Accept.

Different mobile phones have different Miracast setting paths and names, common names are: media output/projection screen/multi-screen interaction, etc., please refer to the mobile phone for details.

Note: Due to the large number of mobile phone types, it is not guaranteed that all mobile phone models can be compatible with the same screen.

7 Maintenance of the projector

Smart projector is a high-tech product integrating precision optics, electronics and machinery. If it is not properly maintained in daily use, it will affect the performance of the projector, longevity and effectiveness. The importance of maintaining the projector is as follows:

1. Dustproof: Due to the influence of the environment, excessive dust on the projector will affect the heat dissipation. Clean the dust filter of the projector in one and a half months in actual environment.

2. Ventilation: Since the projector is an integrated sound and photoelectric device, the light source generates heat when it works by itself. During installation and use, make sure that there are no objects around to block the entrance of the projector. The air vent and the air outlet, because the heat dissipation of the projector depends on the convection of cold air to improve the projector's performance. Working stability and longevity.

3. Lens maintenance: The lens is the core component of the projector, which is directly related to the clarity of the picture. Sharpness and effect. Too much dust on the lens will affect the image quality. When the lens is dirty, please use a soft cloth to clean the glass on the surface of the lens with a cotton cloth, do not use a hard cloth or something corrosive. Wipe the lens.

4. Cleaning: Please clean up the excessive dust on the surface of the projector in time, too much dust will affect the fuselage heat dissipation.

5. Moisture-proof: The projector is easily attacked by humid air, and the working humidity of the projector is about between 45%-60%, the air is too humid and will affect the working stability of the projector.

6. Shockproof: The projector must be strictly prevented from strong impact, extrusion and vibration, especially when the machine is in use. Try not to move and knock the projector during normal work, it may cause the internal electricity of the machine to fail.

7. Do not install the projector on an unstable, shaky or uneven table.

8. Do not place containers filled



8 Product Warranty Policy Description

1. Within 7 days from the date of purchase, if the fault is not caused by improper use or man-made reasons, determine. The failure caused by the product components can be enjoyed with a valid purchase receipt and three-guarantee certificate Return service.

2. Within 8-15 days from the date of purchase, if the malfunction is not caused by improper use or man-made reasons, if it is determined that the fault is caused by the product components, with the valid purchase receipt and the three-guarantee certificate, Enjoy free exchange.

3. The product warranty service period takes effect from the date of production, and the mainframe of the projector series products(excluding accessories/ accessories) 13 months warranty, not caused by improper use or human reasons. The fault is determined to be caused by the main components of the product, with valid purchase receipts and A valid three-guarantee certificate can enjoy free maintenance service.

4. The company has the final right to interpret the Three Guarantees service. The following issues do not enjoy the Three Guarantees service:

① The equipment shell, manual, packaging, promotional items and random gifts are not included in the Three Guarantees service;

② The user disassembles and assembles by himself or disassembles, refits or disassembles, or modifies or disassembles, or disassembles, installs or disassembles without the authorization of the company or the designated service and maintenance point. Damage caused by upgrades, etc.;

③ Damage to the product caused by the use of spare parts not manufactured or sold by the company;

④ Damage caused by not using the machine in accordance with the product instruction manual;

⑤ Fail to provide valid purchase bills and valid three-guarantee certificates;

⑥ Damage caused by force majeure.

PROJECTOR

WZATCO
Yuva Blaze

QUICK GUIDE

STATEMENT

Warning: Operating this device may cause radio interference in a residential environment.



High brightness lamp!
Avoid staring or directly looking at the light, especially for children.



1. Please wash the anti-dust mesh once a month in order to protect your projector!
2. Before using this machine, please remove the protective membrane from the top & bottom cover.

This <GUIDE> offer basic operation, please read the detail operation in <Electronic-directions> from projector software application;
Please read this <GUIDE> carefully before use;
The company reserves the right of final interpretation;
Appearance of the product and the UI please in kind prevail;
If product technology or software upgrades, without prior notice.



Scan the QR code
to register your e-warranty now!
Registration is mandatory

1 Important Notes

How to use the device correctly:

1. Do not point the lens towards the human eye to avoid damage to the eyes caused by the strong light of the lens after the machine is turned on.

2. Please do not block the air inlet/outlet of the device to avoid damage to the internal electronic devices due to the failure of the device to dissipate heat normally.

3. Do not use paper, cloth and other cleaning tools to directly wipe the lens to avoid damage to the lens; please use a cleaning air blower to remove dust on the surface of the lens.

4. Please keep the device and its parts and accessories out of the reach of children.

5. Please ensure that the device is used in a dry and ventilated environment.

6. Do not store and use the device in overheated or cold places. High (low) temperature will shorten the life of electronic devices; the allowable operating environment is 0°C~35°C.

7. Do not forcefully squeeze the device or place shields above or on its back to avoid damage to the device.


8. Do not drop, knock or strongly vibrate the device to cause damage to the internal circuit board.

9. Do not attempt to disassemble the device without permission; if there is any problem, please contact the after-sales service.


10. Do not repair any products by yourself; if the equipment or any parts are not working properly, you should consult the after-sales service or return to the factory for repair.

11. The equipment must not be exposed to water droplets or splashes, and objects filled with liquids such as vases should not be placed on the equipment.


2 Projector

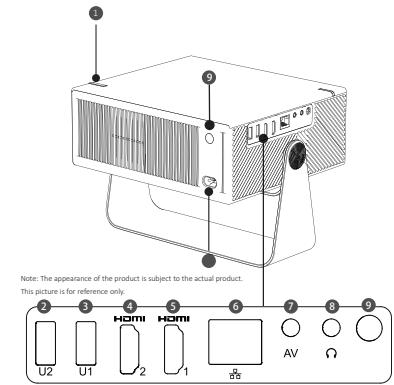

1. Power button
- 2/3. USB input
- 4/5. Hd 1, 2 input
6. Network cable ports
7. Audio and video input
8. Earphone /3.5mm sound output
- 9.Infrared receiver
10. Power input (110-240v~)

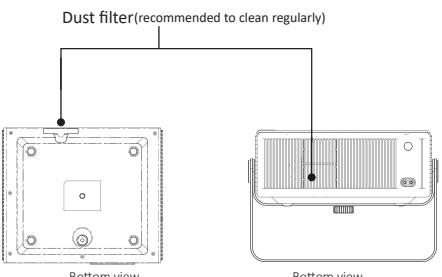

3 Remote control

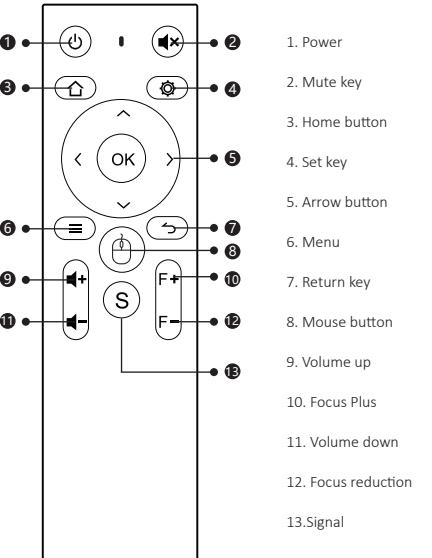


1. Power
2. Mute key
3. Home button
4. Set key
5. Arrow button
6. Menu
7. Return key
8. Mouse button
9. Volume up
10. Focus Plus
11. Volume down
12. Focus reduction
- 13.Signal

4 Device on/off

Step 1: Take out the machine from the packing box, remove the packing bag and lens cover, place the projector on a basic level table, plug in the matching power cord, and then connect to the AC power supply. At this time, the indicator light on the projector panel is Standby red.

Step 2: Press the on-off button "①" on the body or the on-off button "②" on the remote control to start the projector. At this time, the indicator light on the projector panel turns solid blue and the lens emits light, and the projector is started.

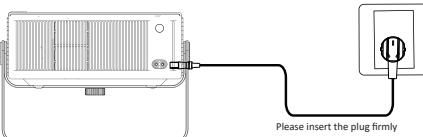


Automatic correction

1. This function is automatically turned on by default, and the screen can be kept square even after the device is displaced.
2. Press the Setting key "⑩", Projector Setting-->Omnidirectional automatic correction shape can be set.

Auto focus

1. This function is automatically turned on by default. If the projector moves, it will trigger the gyroscope and start Auto focus, the picture automatically changes from blur to clear.
2. The focus will be completed automatically. After completion, you can also fine-tune by pressing the left and right buttons on the remote control on the fuselage.

Remote control setting key ▶ Projector Setting ▶ Auto focus

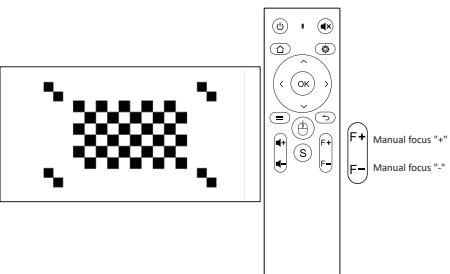

GLOBAL PROJECTION