

Yuva Go Ultra

User Manual



1 Safety Notice

 
- 1.1 Please read this manual carefully before using the projector.
- 1.2 Use a stable, certified power supply (100-240V, 50/60Hz).
- 1.3 Always use the correct power cable supplied with the unit.
- 1.4 Do not disassemble or attempt to repair the projector yourself.
- 1.5 Avoid looking directly into the lens during operation.
- 1.6 Ensure proper ventilation and do not block air vents.
- 1.7 The projector is not waterproof; keep away from liquids.
- 1.8 Disconnect power if unused for a long period.
- 1.9 Avoid exposing the projector to heat, dust, or sunlight.
- 1.10 Keep out of reach of children and handle carefully.
- 1.11 The projector stand is fixed and not designed for removal.

Do not attempt to disassemble.



Ensure the remote has 2 x AAA batteries (not included)

2 Interface Overview

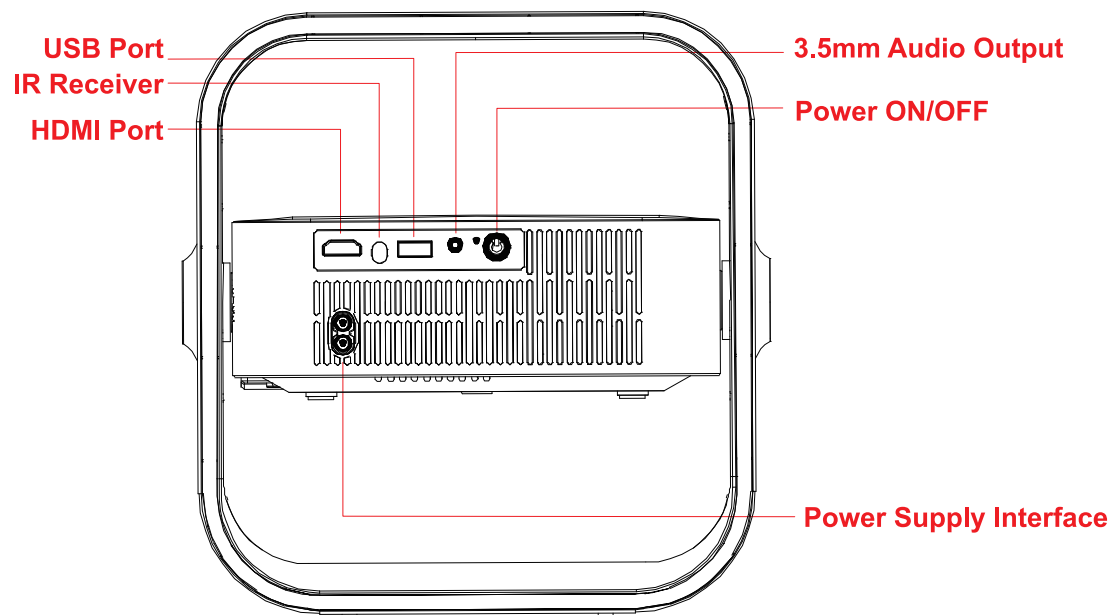

Power Supply Interface: Connect the supplied power cable

Power ON/OFF: Turn projector ON/OFF

 
USB Port: For media playback from a USB drive

HDMI Port: For computers, consoles, or streaming devices

3.5mm Audio Output: For headphones or external speakers

IR Receiver: For remote control operation

3 Remote control

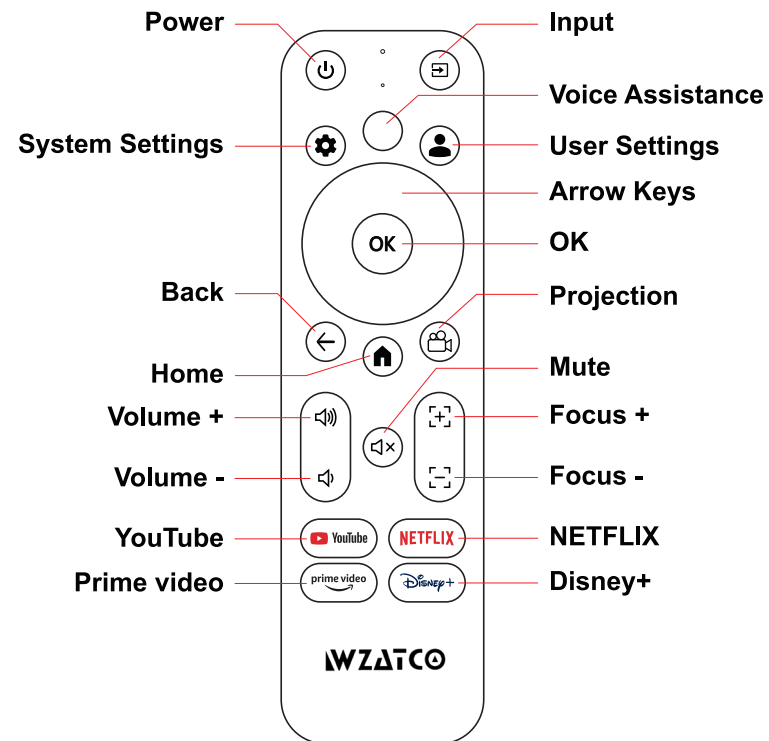

Power: Turn projector ON/OFF

Input: Switch between input sources

System Settings: Access system configuration menus

Voice Assistance: Activate voice control

User Settings: Manage personal preferences

Arrow Keys: Navigate through on-screen options

OK: Confirm selection

Back: Return to previous menu

Home: Return to main screen

Projection: Set mode to orient image

 
Volume: Adjust sound

Mute: Mute/Unmute


Focus: Adjust focus

4 Operation

- Plug the power cable to the projector, and press the power button to turn on
- Operate according to instructions
 1. Match the Bluetooth remote control (requires extra AAA battery*2)


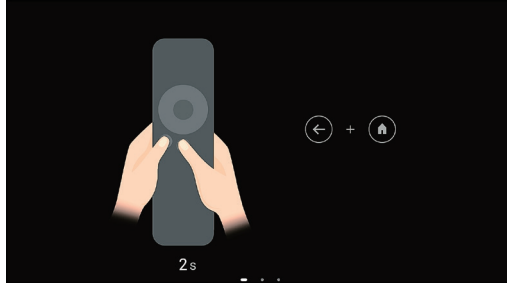


 2. Select your region or country
3. Select and connect to your Wi-Fi network
4. Set up with your Google account and play your favorite content, or search and download your favorite Apps

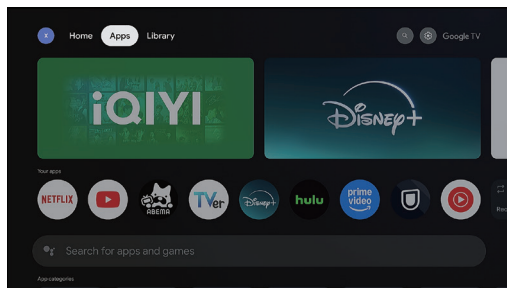


Focus

  - Press the setting button/display setting button - Image Correction
- Set the Picture Focus until the image is clear.

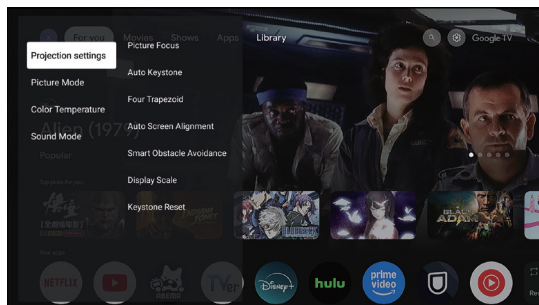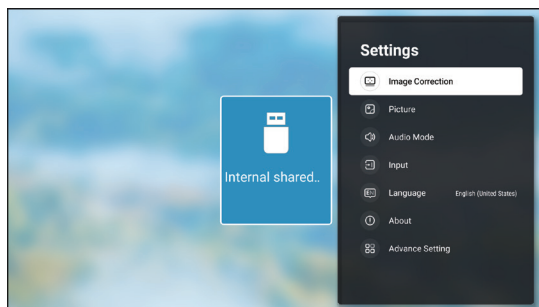


Keystone Correction

 - Press the setting button/display setting button - Image Correction
- Set the Four Trapezoid until the image is square.

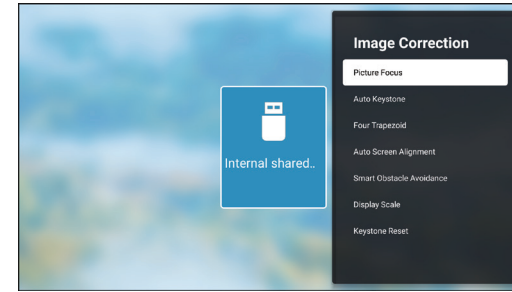


Picture

 - Press the setting button/display setting button - Picture
- Adjust the Color Temperature/Picture Mode according to your preference

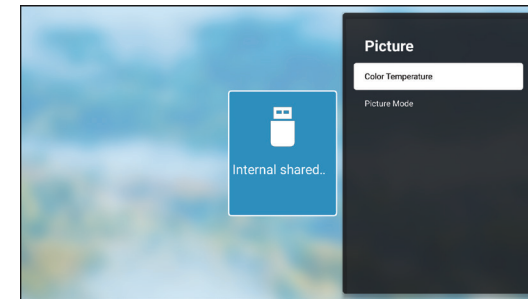


Audio Mode

 - Press the setting button/display setting button - Audio Mode
- Adjust the Sound Mode according to your preference

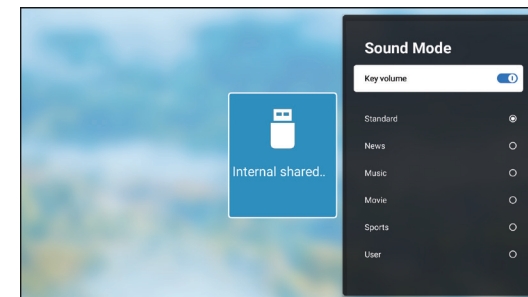



Input

 - Press the sources button to choose input source according to your needs
- Or • Press the setting button - Input - Source Setting

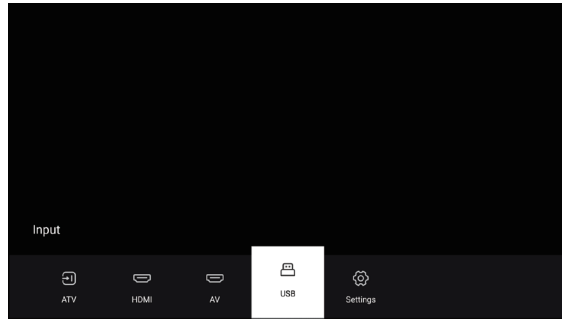


Language

  - Press the setting button/Google TV setting - Language
- Adjust the language according to your needs

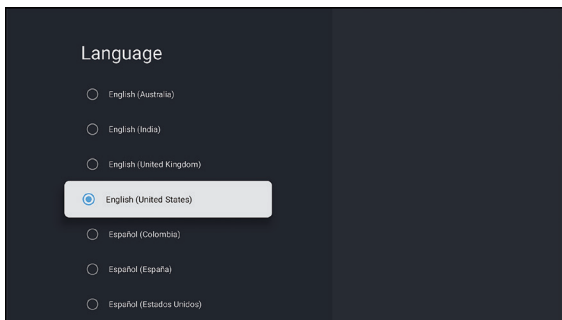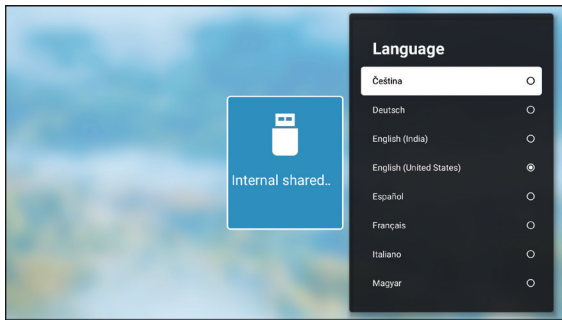


About

 - Go to Settings - About
- Check the projector info here


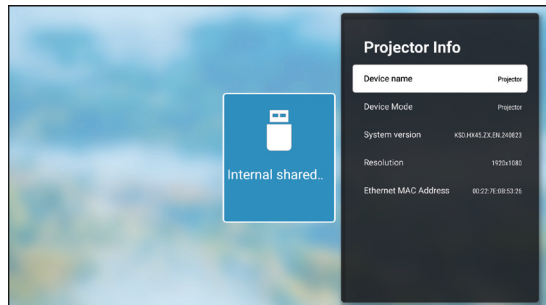


Advance Setting

 - Go to Settings - Advance Setting
- Adjust the advance setting according to your preference

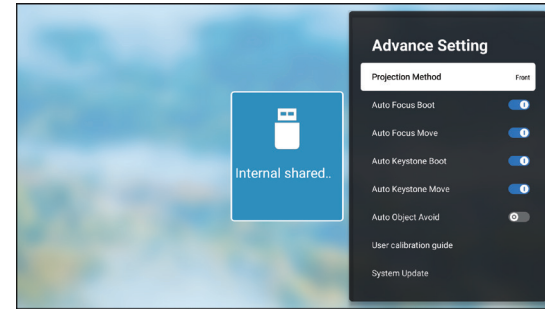


- Go to Settings on the Home page

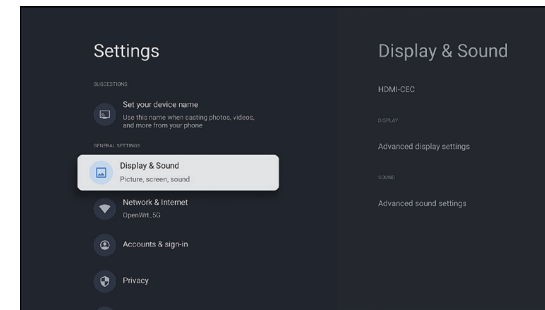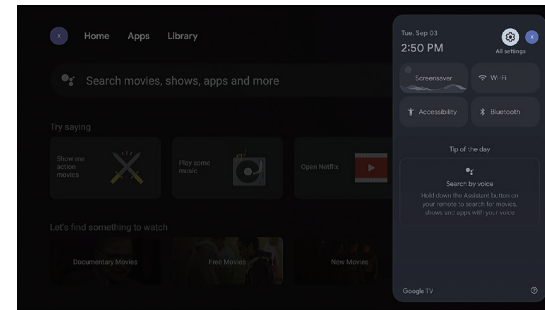  


Network & Internet

 - Set up WIFI

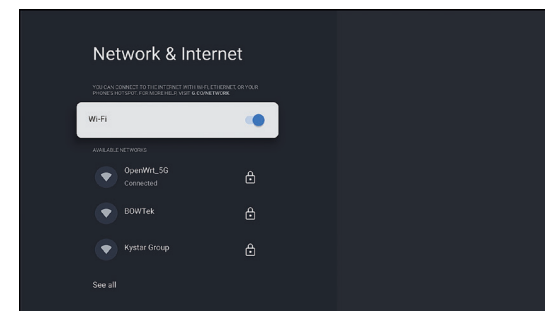


Apps

 - Check all the apps you have downloaded
- Select the unnecessary apps and uninstall

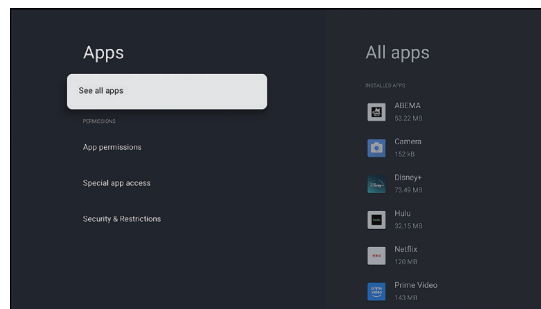

Storage

 
- Check the memory usage of all the apps you download

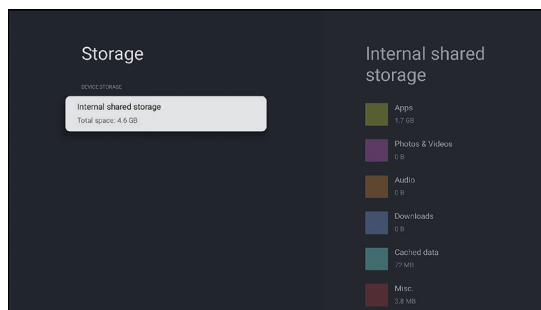

5 Specification

Light source	LED
Light source life	30,000 hours
Lens	Glass lens
Focus mode	Auto focus
Keystone correction	Auto Keystone
Throw ratio	1.2:1 for 1080p
Zoom	Digital
Interface	USBx1 / HDMIx1 / 3.5mm audio out
Working noise	<36 dB
Aspect ratio	16:9 / 4:3 / Auto-fit
Speaker	5W x 1
Product size	220x70x240mm with bracket 194x66x194 mm without bracket
Net weight	1.4 kg with bracket 1.04 kg without bracket
Power Input	100-240V AC 50/60Hz
Power consumption	85W
Remote battery	2xAAA (not included)
Light engine	Sealed dust free

 6 Projector Distance & Size

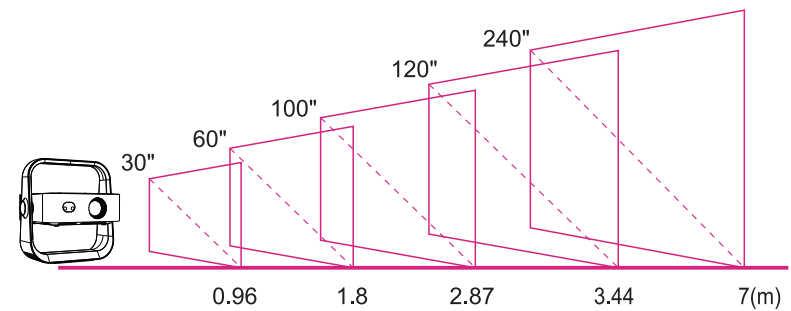

Note: Due to optics error of 3%, the data above is for reference only, please use actual measurement when instal the device.

7 Trouble Shooting

Issue	Possible Cause	Solution
No power	Loose cable or socket issue	Check and secure all power connections
No image	Wrong input selected	Select correct input(HDMI/USB)
Blurry image	Lens not focused	Use auto/electric focus by remote
No sound	Audio muted or disconnected	Increase volume or reconnect device
Image distorted	Incorrect keystone setting	Reset or adjust keystone
Remote not working	Dead or missing batteries	Replace both AAA batteries
Wi-Fi not connecting	Weak signal	Move closer to router
Bluetooth not paring	Device not in paring mode	Re-pair within 5m range
Overheating	Blocked ventilation	Turn off, clear vents and restart
USB not detected	Unsupported format	Reformat to FAT32 or NTFS
General system issue	Software error/corrupted settings	Perform a factory reset

Register Warranty



Scan the QR code
to register your e-warranty now!
Registration is mandatory

DEMO VIDEO



Scan the QR code
to watch the demo video and
explore the features
of your projector

RAISE A TICKET



Scan the QR code
to submit a ticket and
get prompt assistance from
our support team.

NEED ASSISTANCE?



+91 80-7097-7097
support@wzatco.com
Our support team is available
Monday to Saturday,
10:00 AM – 5:00 PM (IST).